
ZICO®

SURE-GRIPTM TOOL MOUNT - 3/4" TO 1-3/4" DIA. MODEL SG-VM-1

3085PM2


PARTS AND INSTRUCTION MANUAL

Rev. 8-28-19

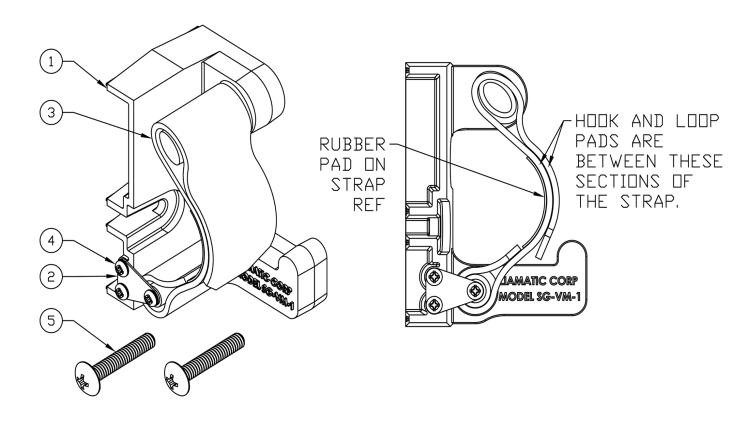


		WT./@
MODEL	DESCRIPTION	IN LBS.
SG-VM-1	SURE-GRIP Bracket - 3/4" - 1-3/4" Dia. grip range	.25

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	3085-500-105	SURE GRIP BASE	1
2	3085-500-107	STRAP PLATE	1
3	3085-500-109	STRAP, VARIABLE	1
4	9125-191306	SCREW, #6-20X3/8", PLASTIC TRHEAD CUT- TING, SS, 94629A70	3
5	9010-262520	SCREW, 1/4-20x1 1/4" TRUSS HEAD ZPS	2

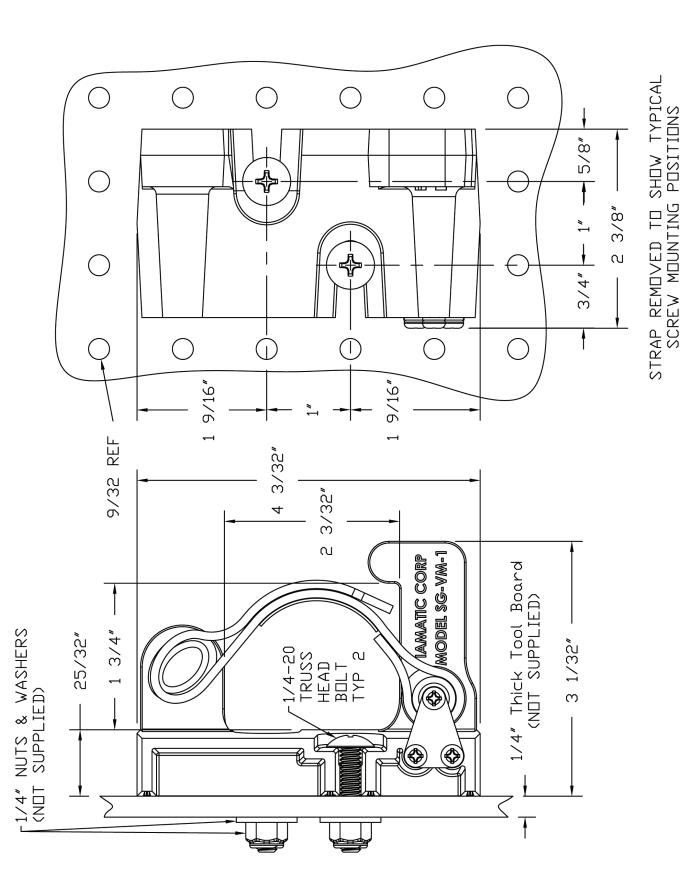

Page 2

Oval-shaped post

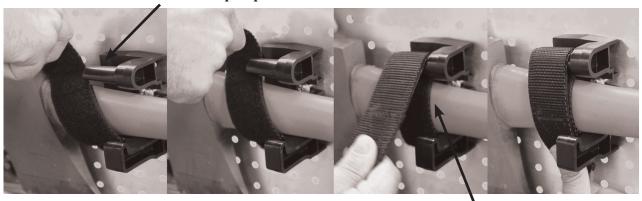

Hook & loop pads

Note: Part numbers in parentheses (see Page 1).

I. INSTALLATION

- 1. The support arm on the Base (1) should be positioned toward the bottom of the compartment, in both horizontal and vertical storage configurations.
- 2. Attach Base to mounting surface using Truss Head Screws (5) combined with 1/4" nuts and washers (not provided). If longer screws are needed, use low profile truss head screws.
- 3. When using two SURE-GRIP mounts to secure one tool, space the mounts approximately shoulder-width apart to allow for quicker and easier operation.

II. SECURING THE TOOL

- 1. Place and hold the tool against the Base. When in a horizontal configuration, support arm may be used for assistance and stability.
- 2. Place the Strap (3) over the tool. Slide it behind the oval-shaped post from the side (see above).
- 3. While maintaining tension on the strap, pull away from the Base to tighten, then connect the hook pad and the loop pad to secure.

III. REMOVING THE TOOL

- 1. Grab the end of the strap at the red tab and pull away from the base to release the hook & loop connection.
- 2. Pull the tool towards you, through the loosened strap. Strap will free itself as you pull.



www.ziamatic.com TOLL FREE: 800-711-3473

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

Copyright Ziamatic Corp. 8-19