

Shield Solutions Hose End Foam Sprayer (HF001)

Package Contains:

- Injection molded assembly: foaming barrel, handle, and eductor.
- Concentrate container: Model HF001 - 96oz.

- 3. Suction tube/strainer.
- 4. Spray nozzle with quick disconnect assembly.
- Metering tip kit.
- 6. Product information sheet.

THANK YOU FOR YOUR INTEREST IN OUR PRODUCTS		
_	Please use this equipment carefully and observe all warnings and cautions.	
WEAR	protective clothing and eyewear when dispensing chemicals or other materials.	
ALWAYS	observe safety and handling instructions of the chemical manufacturers.	
ALWAYS	direct discharge away from you or other persons or into approved containers.	
ALWAYS	dispense cleaners and chemicals in accordance with manufacturer's instructions. Exercise CAUTION when maintaining your equipment.	
CLEAN	equipment after each use in accordance with instruction sheet.	
WEAR	protective clothing and eyewear when working in the vicinity of all chemicals, filling or emptying equipment or changing metering tips.	
ALWAYS	re-assemble equipment according to instruction procedures. Be sure all components are firmly screwed or latched into position.	
ATTACH	only to tap water outlets (85 PSI maximum).	

Operation:


- 1. Unscrew foamer lid assembly from container.
- Select a metering tip using the chart below as a guideline and press the tip firmly into the hose barb on the bottom of the lid assembly. Install the suction tube on the hose barb.
- 3. Fill the container with concentrate. Screw foamer lid assembly securely onto container.

CAUTION: Foamer lid assembly must be securely fastened to container to prevent accidental spilling of concentrate during use of foamer.

- 4. Insert foamer lid assembly into female quick connect on spray nozzle.
- 5. Connect a garden hose with 3/4" male garden hose thread to the base of the spray nozzle handle. Turn on the water supply to the hose. (Minimum 25 PSI water pressure is required to operate the foamer.)
- 6. Grasp the spray nozzle handle in one hand and the foamer container in the other. Squeeze the spray nozzle handle to begin foaming. Continuous operation can be achieved by usingthe handle lock provided on the spray nozzle. Rinse by disconnecting the spray nozzle from the foaming lid assembly. To remove the foamer from the spray nozzle, simply grasp the quick connect on the spray nozzle in one hand and the foamer assembly in the other. Pull in opposite directions. (The outside collar around the quick connect will slide toward the spray nozzle, disengaging the foamer barrel.)

Troubleshooting:

Problem Cause Remedy Unit does not draw a Clogged suction tube a Cleanorreplace strainer concentrate b. Metering tip orifice b. Rinse tip or replace: Do not attempt to clean: obstructed may alter size of orifice c. Water pressure too low c. Minimum 25 PSI required d. Mineral deposits in d. Back flush unit. Remove container, suction in barrel of foamer tube and metering tip. Put finger over barrel opening. Apply minimal water pressure through garden hose at nozzle of barrel to be flushed. d. Descale foamer by soaking in weak descaling solution. e. Clean or replace strainer. e. Clogged water inlet strainer (low water flow) 2. Weak foaming action a. Clogged water inlet a. Clean or replace strainer b. Water pressure too low b. Minimum 25 PSI required c. Water temperature too c. Use lower temp water source. (Concentrate high flow decreases above 140° F water) If above steps fail to produce good concentrate draw and/or foaming action, replace lid assembly. See component chart below.

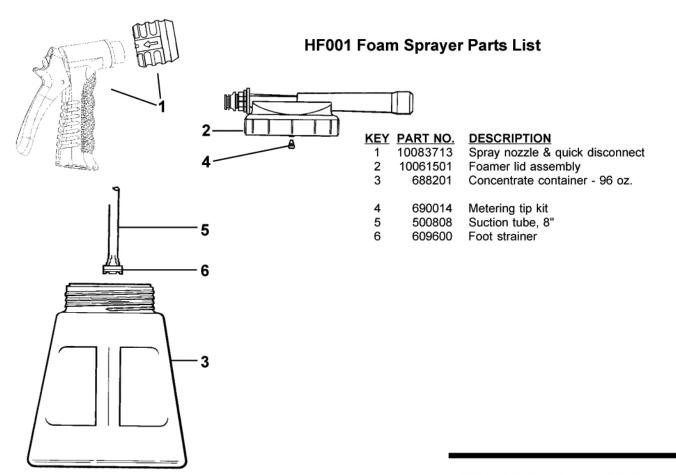



Shield Solutions, LLC

P: 920-474-7502 ~ 877-474-7501

F: 920-474-7497

www.shieldsolutionsllc.com